


DISPLAY AND CROWN/BUTTON OPERATION

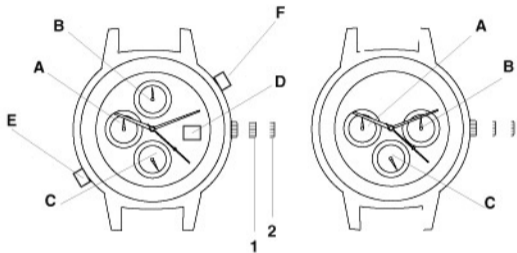

CROWN POSITION

- Position 1** date change
Position 2 Setting time and day

DIALS

- A** Date indicator
B Day indicator
C 24 hour indicator
D Month indicator
E Torch
F Month button

DATE INDICATOR

- The date can be adjusted by pulling out the crown to the first position and turning anticlockwise to move the date indicator hand into the correct position on the date indicator dial.

DAY INDICATOR

- To adjust the day, pull the crown out to the second position. Move the watch dial hands clockwise or anticlockwise, through 24 hour revolutions, to move the day indicator hand forwards or backwards to the correct position on the day indicator dial.

MONTH INDICATOR

- The month can be adjusted by pressing button F.

HOUR, MINUTE, SECOND AND 24 HOUR HANDS

- Pull the crown out to the second click position and turn the crown clockwise or anticlockwise to place the hour, minute and second hands in the correct position.
- The 24 hour dial runs automatically with the 12 hour dial.

TORCH

- The torch lights by pushing button E.